

ezConfig User's Manual

Version 4.0

- Contents –

1. EZCONFIG PROGRAM SUMMARY	- 4 -
2. EZCONFIG PROGRAM OPERATION MODES.....	- 5 -
2.1. BROADCASTING	- 5 -
2.2. UNICASTING.....	- 6 -
3. EZCONFIG PROGRAM FUNCTIONS	- 7 -
3.1. THE SELECTION OF THE EZCONFIG PROGRAM OPERATING MODE.....	- 7 -
3.2. SEARCHING EZTCP	- 8 -
3.3. READING SETTINGS.....	- 8 -
3.3.1. <i>Using search results</i>	- 8 -
3.3.2. <i>Using MAC address</i>	- 8 -
3.3.3. <i>Using IP address</i>	- 8 -
3.4. SAVING SETTINGS	- 8 -
3.5. SUPPLYING PPPoE ID	- 8 -
3.6. SUPPLYING PASSWORD.....	- 9 -
3.7. CURRENT EZTCP STATUS LOOKUP	- 10 -
3.8. QUITTING EZCONFIG	- 10 -
3.9. EZTCP SETUP ITEM	- 11 -
3.9.1. <i>ezTCP Communication Mode Setup</i>	- 11 -
3.9.2. <i>Network Setup</i>	- 12 -
3.9.3. <i>Serial Port Setup</i>	- 13 -
3.9.4. <i>Wireless LAN Setup</i>	- 14 -
3.10. EZTCP OPTIONS ITEM	- 15 -
3.10.1. <i>DHCP</i>	- 15 -
3.10.2. <i>PPPoE</i>	- 16 -
3.10.3. <i>ezCFG</i>	- 17 -
3.10.4. <i>WLAN CFG</i>	- 18 -
3.10.5. <i>Power Down</i>	- 18 -
3.10.6. <i>ARP</i>	- 19 -
3.10.7. <i>Multiple Connection</i>	- 20 -
3.10.8. <i>Telnet</i>	- 20 -
3.10.9. <i>EAPoL (Extensible Authentication Protocol over LAN)</i>	- 21 -
3.10.10. <i>Security</i>	- 21 -
3.10.11. <i>Remote Search</i>	- 22 -

3.10.12.	<i>WLAN Start Option</i>	- 22 -
3.10.13.	<i>Comment</i>	- 23 -

1. ezConfig program summary

- ezConfig is a utility program, which configures ezTCP equipment settings over wired or wireless LAN.
- ezConfig supports ezTCP/LAN products of wired/wireless LAN product line (referred to as ezTCP). As product features are changing and new products are developed, ezConfig user interfaces can be changed without notice. Please make sure to download the last version of ezConfig from our web site, so you can stay up to date.
- <http://www.eztcp.com/en/Support/support.php>

2. ezConfig program operation modes

2.1. Broadcasting

The screenshot shows the ezConfig v4.0a (01/Aug./2005) window. The 'LOCAL' tab is active. The MAC Address field contains '00 30 f9 00 00 01'. The Local IP Address is '10 . 1 . 0 . 1', Subnet Mask is '255 . 0 . 0 . 0', Gateway IP Address is '0 . 0 . 0 . 0', Peer IP Address is '0 . 0 . 0 . 0', and Reserved is empty. The ezTCP Mode is 'ATC(1)', Local Port is '0', Timeout is '0', Conn. Byte is '1', Peer Port is '0', and Password is empty. The Serial Type is 'RS-232', Baudrate is '19200', Parity is 'NONE', Data Bits is '8', Stop Bit is '1 bit', and Flow Control is 'NONE'. The WLAN Mode is 'Infrastructure(1)', Target SSID is empty, Ad-hoc Master SSID is empty, Channel is '0', WEP is 'No WEP(0)', and WEP Key is empty. The Options section includes checkboxes for DHCP, PPPoE, ezCFG (checked), WLAN CFG, Power Down, Remote Search, WLAN Start Option, ARP (checked), Multi Conn., Telnet (checked), EAPoL, and Secure. A Comment field is at the bottom. Action buttons include Search ezTCP, Write, PPPoE ID, Change PWD, Status, and Exit.

- In Broadcasting mode, coded UDP packets are broadcasted over network to detect ezTCP in the same network segment. ezConfig waits 2 seconds for the response from an ezTCP.
- In Broadcasting mode there should be no firewall between the computer running ezConfig and the ezTCP. Also, computer and ezTCP should be located in the same subnet since a firewall and/or gateway would block broadcast packets and ezConfig won't be able to detect ezTCP.

2.2. Unicasting


- The Unicasting mode is useful when you know the IP address of ezTCP. Unlike broadcasting, the UDP packet is sent directly to ezTCP IP address. UDP port is set to 50005.
- The Unicasting mode is available for the following ezTCPs only:

LAN Type	Product Name
Wired LAN	EZL-50L, EZL-200L, EZL-200F
Wireless LAN	EZL-300L, EZL-300S EZL-80 / 80c / 90 / 300W Lite (firmware v1.3i or higher)

3. ezConfig program functions


3.1. The selection of the ezConfig program operating mode

You can select ezConfig program operating mode using [LOCAL] or [REMOTE] tab.

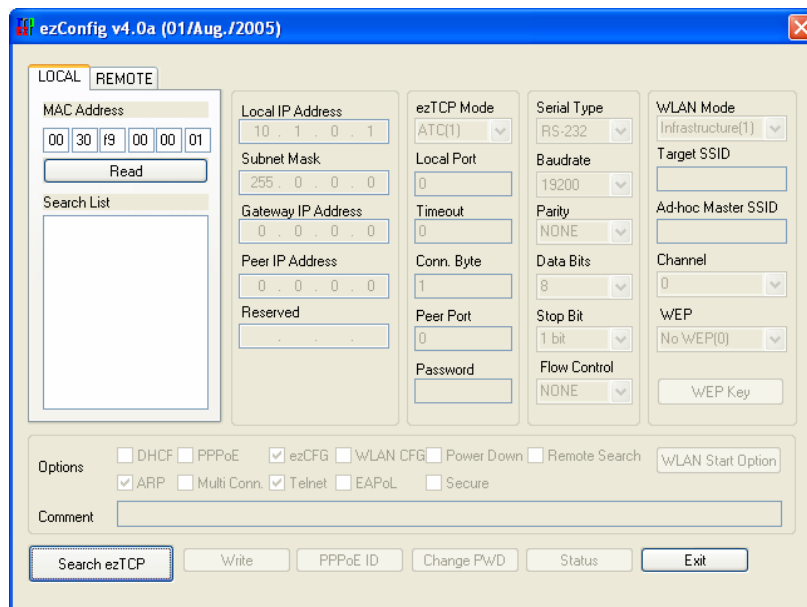

The screenshot shows the ezConfig v4.0a (01/Aug./2005) window with the LOCAL tab selected. The interface includes a MAC Address field with a 'Read' button and a 'Search List' box. The main configuration area is divided into several sections: Local IP Address (10.1.0.1), Subnet Mask (255.0.0.0), Gateway IP Address (0.0.0.0), Peer IP Address (0.0.0.0), and Reserved. The ezTCP Mode is set to ATC(1), Local Port is 0, Timeout is 0, Conn. Byte is 1, Peer Port is 0, and Password is empty. Serial Type is RS-232, Baudrate is 19200, Parity is NONE, Data Bits is 8, Stop Bit is 1 bit, and Flow Control is NONE. WLAN Mode is Infrastructure(1), Target SSID is empty, Ad-hoc Master SSID is empty, Channel is 0, WEP is No WEP(0), and WEP Key is empty. The Options section includes checkboxes for DHCP, PPPoE, ezCFG (checked), WLAN CFG, Power Down, Remote Search, ARP (checked), Multi Conn., Telnet (checked), EAPoL, and Secure. A Comment field is at the bottom. Action buttons include Search ezTCP, Write, PPPoE ID, Change PWD, Status, and Exit.

[Fig. 3.1.1 Broadcasting]

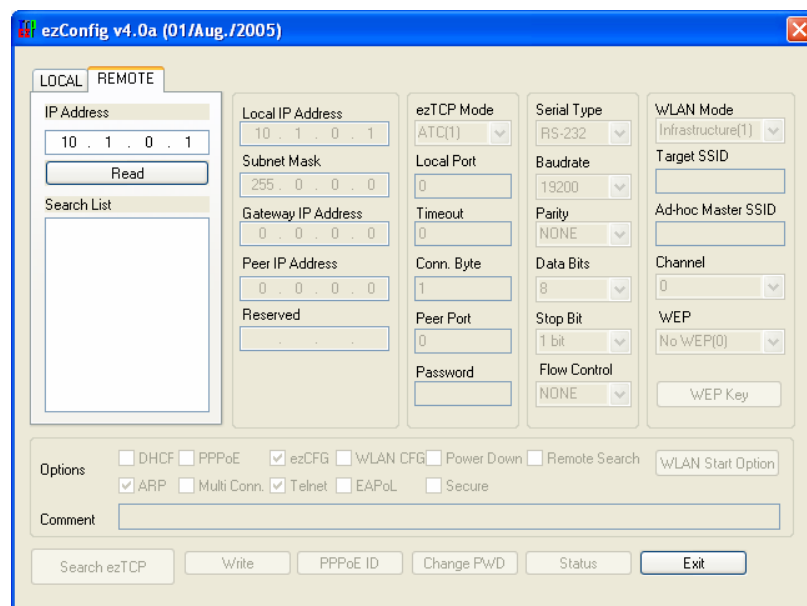

The screenshot shows the ezConfig v4.0a (01/Aug./2005) window with the REMOTE tab selected. The interface is similar to the LOCAL tab, but the IP Address field is set to 10.1.0.1. The Local IP Address, Subnet Mask, Gateway IP Address, Peer IP Address, and Reserved fields remain the same. The ezTCP Mode, Local Port, Timeout, Conn. Byte, Peer Port, Password, Serial Type, Baudrate, Parity, Data Bits, Stop Bit, Flow Control, WLAN Mode, Target SSID, Ad-hoc Master SSID, Channel, WEP, and WEP Key fields are also the same. The Options section and the bottom buttons (Search ezTCP, Write, PPPoE ID, Change PWD, Status, Exit) are identical to the LOCAL tab.

[Fig. 3.1.2 Unicasting]

3.2. Searching ezTCP

- In Broadcasting mode you can search for all ezTCPs in the network segment. MAC addresses of all found ezTCPs are listed in the [Search List] window.
- [Search ezTCP] is possible in Broadcasting mode only.

3.3. Reading Settings

3.3.1. Using search results

- To read ezTCP settings, select a found device in the [Search List] window and click Read.

3.3.2. Using MAC address

- In Broadcasting mode, supply the desired MAC address in the input box and click Read. If the supplied MAC address corresponds to a ezTCP device in the network, its settings will be displayed.

3.3.3. Using IP address

- In Unicasting mode, supply the desired IP address in the input box and click Read. If the supplied IP address corresponds to a ezTCP device in the network, its settings will be displayed.
- In unicasting mode you can display settings for all ezTCPs in the network by using network broadcast IP address.


3.4. Saving Settings

- After you edit ezTCP settings, click [Write] to store the changes you have made.
- **Caution: When you save ezTCP settings use the same ezTCP value model. Wrong model may cause malfunction or break down the equipment.**

3.5. Supplying PPPoE ID

- The [PPPoE ID] button becomes available only when the [3.10.2. PPPoE] option is selected.


- When you click PPPoE ID, the ACCOUNT window is displayed. Supply your USERNAME and PASSWORD. Once again type your password in the CONFIRM field and click OK.

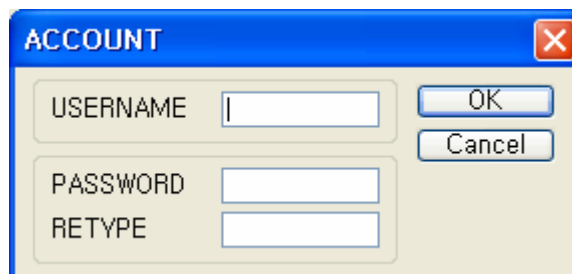

The ACCOUNT dialog box has a blue title bar with the text 'ACCOUNT' and a red close button. It contains three input fields: 'USERNAME', 'PASSWORD', and 'RETYPE'. To the right of the input fields are two buttons: 'OK' and 'Cancel'.

- Click [Write] to store data to ezTCP.
- USERNAME can contain up to 32 bytes.
- PASSWORD can contain up to 8 bytes.


3.6. Supplying Password

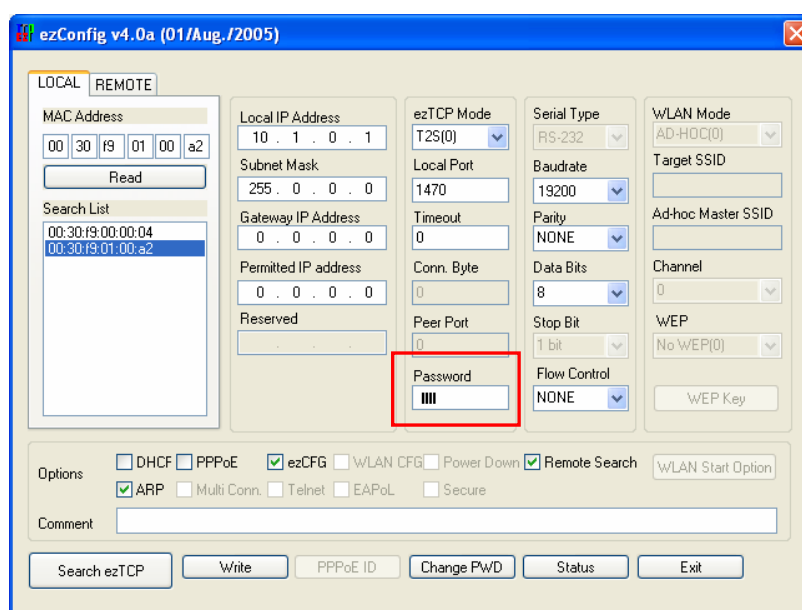

The ezConfig v4.0a (01/Aug./2005) window shows various configuration options. The 'LOCAL' tab is selected. The 'ezTCP Mode' is set to 'T2S[0]'. The 'Password' field is highlighted with a red box and contains four asterisks. The 'Options' section at the bottom includes checkboxes for 'DHCF', 'PPPoE', 'ezCFG', 'WLAN CFG', 'Power Down', 'Remote Search', 'ARP', 'Multi Conn.', 'Telnet', 'EAPoL', and 'Secure'. The 'Write' button is visible at the bottom.

[Fig 3.6.1. Password]


- You can set security password for your ezTCP equipment. Click [Change PWD] to display Change Password window as shown below. Supply the password you want and click OK to save your password to ezTCP.

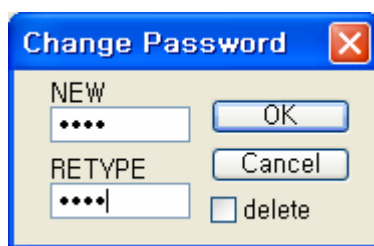

- When ezTCP password is enabled, all security features will require password input.
- If you forget your password, refer to the product manufacturer's manual on how to recover your password.
- Password can contain up to 8 bytes.

3.7. Current ezTCP Status Lookup

- In the [Search List] window select a desired ezTCP and click [Status] to display the current ezTCP status. The ezTCP Status window is displayed showing firmware version, network configuration data, send/receive statistics, etc.

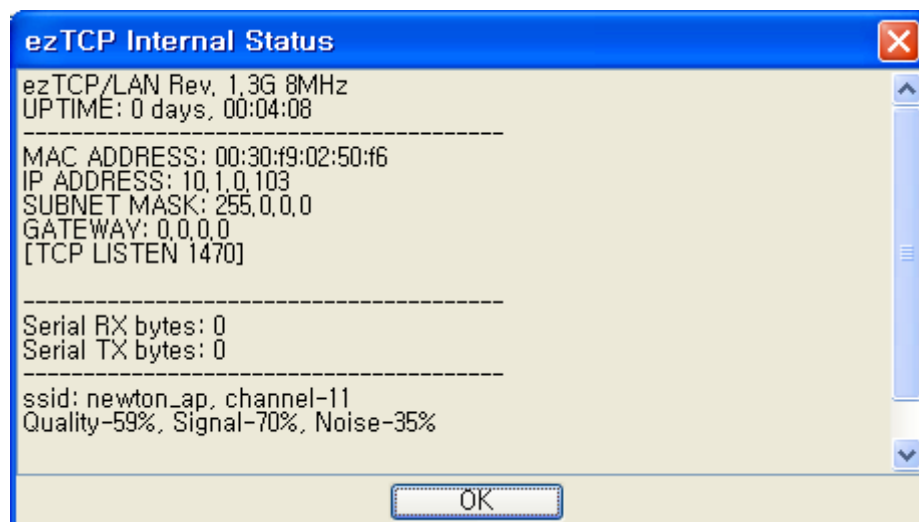

[Fig. 3.7.1. ezTCP(EZL-80c) Status window]

3.8. Quitting ezConfig Program

- To quit ezConfig click [Exit].

3.9. ezTCP Setup Item

3.9.1. ezTCP Communication Mode Setup

[Fig. 3.9.1.1. ezTCP Mode]

Value	Description
T2S(0)	Work as TCP server.
ATC(1)	Can control ezTCP like a MODEM using AT commands. Can works as a TCP server or a TCP client, as the need may be.
COD(2)	Work as a TCP client.
U2S(3)	Use UDP.


3.9.2. Network Setup

[Fig. 3.9.2.1. Network Setup]

Value	Description
Local IP Address	ezTCP IP address.
Subnet Mask	Subnet mask of the network where ezTCP is installed.
Gateway IP Address	IP address of the gateway of the network where ezTCP is installed..
Peer IP Address / Permitted IP Address	1. When [ezTCP Mode] is set to COD(2), this is the IP address of the server for ezTCP connection. 2. When [ezTCP Mode] is set to T2S(0), this setting is valid for a few products only and the field label changes to "Permitted IP Address." The value is the IP address of the host, which allows connection to ezTCP. If you supply 0.0.0.0, connection will be possible from any machine.
Local Port	1. If [ezTCP Mode] is set to T2S(0), this value is used as TCP port number for client connection. 2. If [ezTCP Mode] is set to U2S(3), this value is used as a port number for UDP communication.
Timeout / Interval	1. For TCP communication when [ezTCP Mode] is set to T2S(0), ATC(1), or COD(2). In case of non-zero value, if no data communication takes place for more

	<p>than the specified time, the TCP connection is dropped. (Unit: sec.)</p> <p>2. When [ezTCP Mode] is set to U2S(3), the label changes to "Interval" and specifies data collection timeframe for UDP communication. (unit:10ms)</p>
Conn. Byte / Block(Byte)	<p>1. When [ezTCP Mode] is set to COD(2). When the amount of data exchanged over the serial port is more than the supplied value, it starts to connect to the designated server.</p> <p>2. When the [ezTCP Mode] is set to U2S(3). The label title changes to Block(Byte) and specifies a single UDP packet size.</p> <p>3. In other modes this option is not available.</p>
Peer Port	<p>1. When [ezTCP Mode] is set to COD(0), this value is used as the port number of the connecting TCP server.</p> <p>2. When [ezTCP Mode] is set to U2S(3), this value is used as a port number for UDP data communication.</p>

3.9.3. Serial Port Setup

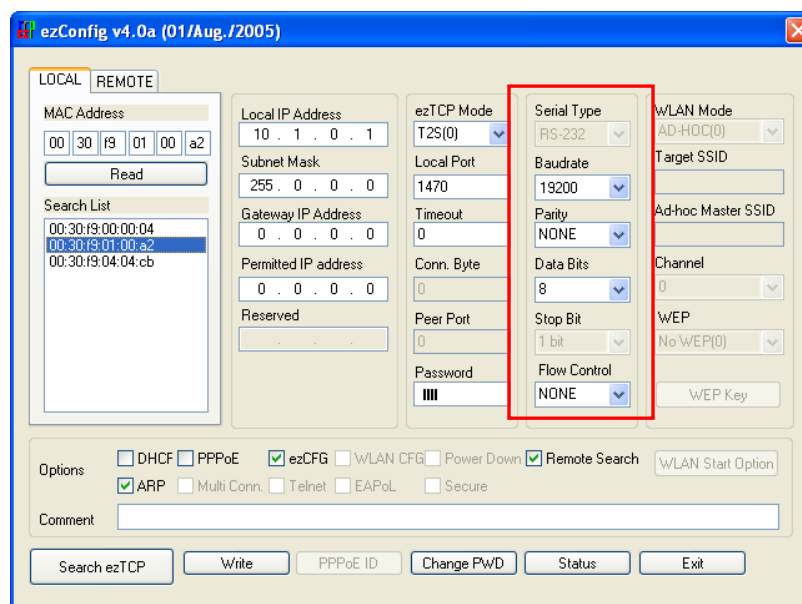


[Fig. 3.9.3.1. Serial Port Setup]

Value	Description
Serial Type	Default value is RS-232. In case RS-422 or RS-485 are

	supported by the specific product, corresponding values are automatically added to the list for you could pick them up.
Baud rate	Serial port speed.
Parity	Serial port parity. (None, Even, Odd)
Data Bits	Serial port data bit length. (7 bits or 8 bits)
Stop Bit	Default value is 1 bit. In case 2 stop bits are supported by the specific product, corresponding values are automatically added to the list for you could pick them up.
Flow Control	Serial port flow control mode. (None, RTS/CTS, XON/XOFF)

3.9.4. Wireless LAN Setup

- You can configure EZL-80 / 80c / 90 / 300W-Lite / 300L wireless LAN products.
- If you select [3.10.4. WLAN CFG] option, all wireless settings become available.

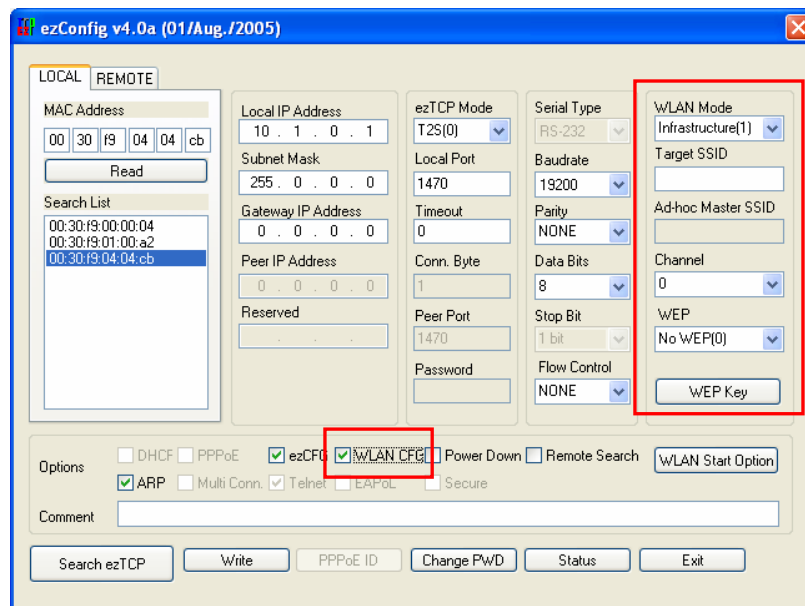

[Fig. 3.9.4.1. Wireless LAN]

Value	Description
WLAN Mode	The type of the network where ezTCP is installed:

	Infrastructure(1) or Ad-Hoc(0).
Target SSID	<p>1. If WLAN mode is set to Infrastructure and you want to connect to a specific Access Point, supply the Access Point SSID for this value.</p> <p>2. If WLAN Mode is set to Ad-Hoc(0), this value must be set to Ad-Hoc master SSID.</p> <p>3. The maximum length of the Target SSID can be 32 bytes.</p>
Ad-hoc Master SSID	<p>1. If WLAN Mode is set to Ad-Hoc(0) this setting becomes available so you could supply a valid value when ezTCP is used as Ad-Hoc master.</p> <p>2. Maximum Ad-hoc Master SSID is 32 bytes.</p>
Channel	This value lets you specify the number of the channel used by Access Point (AP). If this value is set to 0, the channel is set automatically to AP default.
WEP	If you want to use WEP over ezTCP in the wireless network, select WEP type, and click the WEP KEY to supply the currently used KEY.

3.10. ezTCP Options Item

3.10.1. DHCP


The screenshot shows the ezConfig v4.0a (01/Aug./2005) window. The 'LOCAL' tab is active. The 'Options' section at the bottom has a red box around the 'DHCP' checkbox, which is currently unchecked. Other options include ARP (checked), PPPoE, ezCFG, WLAN CFG, Power Down, Remote Search, and WLAN Start Option. The interface also shows fields for MAC Address, Local IP Address, Subnet Mask, Gateway IP Address, Permitted IP address, Reserved, ezTCP Mode, Local Port, Timeout, Conn. Byte, Peer Port, Password, Serial Type, Baudrate, Parity, Data Bits, Stop Bit, Flow Control, WLAN Mode, Target SSID, Ad-hoc Master SSID, Channel, WEP, and WEP Key.

[Fig. 3.10.1.1. DHCP]

- This option is used for DHCP mode to get IP address automatically.
- The table below shows which ezTCP products support DHCP.

	T2S(0)	ATC(1)	COD(2)	U2S(3)
EZL-50R		⊙	⊙	
EZL-50L/200L	⊙	⊙	⊙	
EZL-200A	⊙	⊙	⊙	
EZL-200F	⊙	⊙	⊙	
EZL-80/80c/90/ 300W-Lite/ 300L		⊙	⊙	
EZL-300W	⊙	⊙	⊙	
EZL-300S	⊙	⊙	⊙	

3.10.2. PPPoE

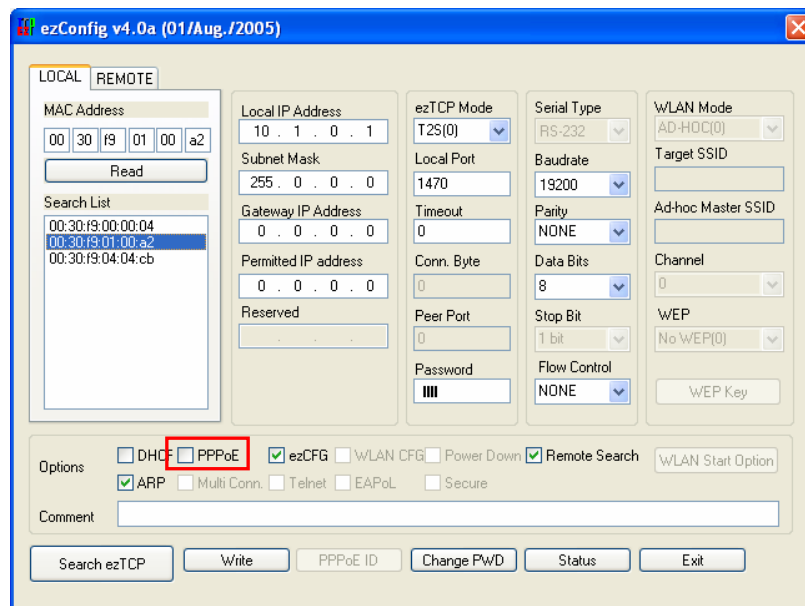


[Fig. 3.10.2.1. PPPoE]

- This option is for PPPoE method to get IP address automatically.
- The table below shows which ezTCP products support PPPoE.

	T2S(0)	ATC(1)	COD(2)	U2S(3)
EZL-50R		⊙	⊙	
EZL-50L/200L	⊙	⊙	⊙	
EZL-200A	⊙	⊙	⊙	
EZL-200F	⊙	⊙	⊙	
EZL-80/80c/90/ 300W Lite/300L				
EZL-300W				
EZL-300S				

3.10.3. ezCFG

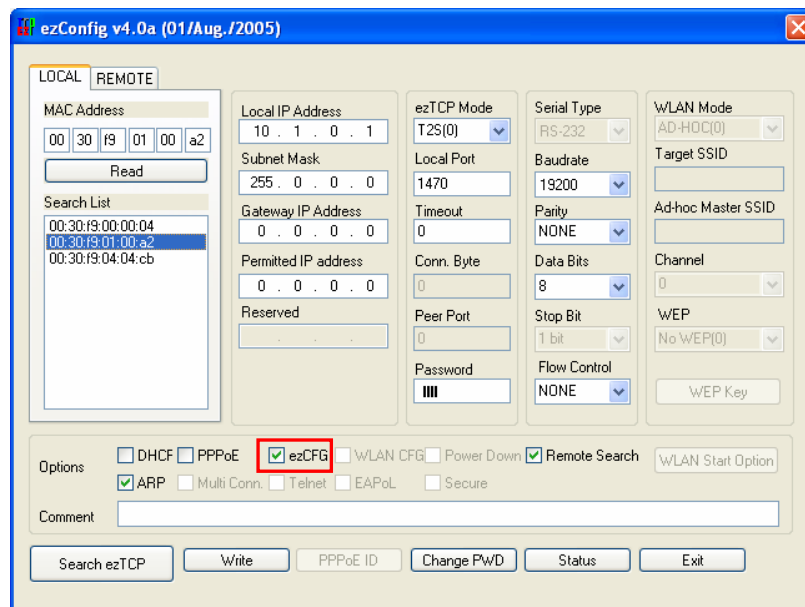

[Fig 3.10.3.1. ezCFG]

- This option allows you managing ezTCP using ezConfig. All ezCFG options are reset to default. When ezCFG option is disabled, you cannot search and manage ezTCP with ezConfig. Refer to the specific product manual to see how to rechecking the ezCFG option after unchecking the ezCFG option.

3.10.4. WLAN CFG

The screenshot shows the ezConfig v4.0a (01/Aug./2005) interface. The 'LOCAL' tab is selected. The 'WLAN CFG' checkbox is checked and highlighted with a red box. The 'Power Down' checkbox is unchecked. The 'WLAN Start Option' button is visible. The 'Options' section includes checkboxes for DHCP, PPPoE, ezCFG, WLAN CFG, Power Down, Remote Search, ARP, Multi Conn., Telnet, EAPoL, and Secure. The 'Comment' field is empty. The 'Search ezTCP', 'Write', 'PPPoE ID', 'Change PWD', 'Status', and 'Exit' buttons are at the bottom.

[Fig. 3.10.4.1. WLAN CFG]

- This option is used to configure wireless LAN settings using ezConfig. This option is supported for EZL-80, EZL-80c, EZL-90, EZL-300W Lite, EZL-300L products only.

3.10.5. Power Down

The screenshot shows the ezConfig v4.0a (01/Aug./2005) interface. The 'LOCAL' tab is selected. The 'Power Down' checkbox is checked and highlighted with a red box. The 'WLAN CFG' checkbox is also checked. The 'WLAN Start Option' button is visible. The 'Options' section includes checkboxes for DHCP, PPPoE, ezCFG, WLAN CFG, Power Down, Remote Search, ARP, Multi Conn., Telnet, EAPoL, and Secure. The 'Comment' field is empty. The 'Search ezTCP', 'Write', 'PPPoE ID', 'Change PWD', 'Status', and 'Exit' buttons are at the bottom.

[Fig. 3.10.5.1. Power Down]

- Switches the wireless LAN card to Power Down mode. Power Down mode helps you save wireless LAN power, however communication speed will be decreased.
- Select [3.10.4. WLAN CFG] option to enable Power Down mode.

3.10.6. ARP

The screenshot shows the ezConfig v4.0a (01/Aug./2005) window. The interface is divided into several sections. On the left, there are tabs for 'LOCAL' and 'REMOTE'. Below these, there's a 'MAC Address' section with a 'Read' button and a 'Search List' containing two entries: '00:30:f9:00:00:04' and '00:30:f9:01:00:a2'. The 'LOCAL' section contains fields for 'Local IP Address' (10.1.0.1), 'Subnet Mask' (255.0.0.0), 'Gateway IP Address' (0.0.0.0), 'Peer IP Address' (0.0.0.0), and 'Reserved'. The 'ezTCP Mode' section includes 'Local Port' (1470), 'Timeout' (0), 'Conn. Byte' (1), 'Peer Port' (1470), and 'Password'. The 'Serial Type' section has 'Baudrate' (19200), 'Parity' (NONE), 'Data Bits' (8), 'Stop Bit' (1 bit), and 'Flow Control' (NONE). The 'WLAN Mode' section includes 'WLAN Mode' (Infrastructure(1)), 'Target SSID', 'Ad-hoc Master SSID', 'Channel' (0), 'WEP' (No WEP(0)), and a 'WEP Key' button. At the bottom, there's an 'Options' section with checkboxes for 'DHCP', 'PPPoE', 'ezCFG', 'WLAN CFG', 'Power Down', 'Remote Search', 'Multi Conn.', 'Telnet', 'EAPoL', 'Secure', and 'ARP'. The 'ARP' checkbox is checked and highlighted with a red box. Below the 'Options' section is a 'Comment' field and a row of buttons: 'Search ezTCP', 'Write', 'PPPoE ID', 'Change PWD', 'Status', and 'Exit'.

[Fig. 3.10.6.1. ARP]

- When the ARP option is selected, local IP address of the ezTCP equipment can be temporarily set using ARP packets. The ARP option is enabled by default.
- Refer to specific products manual for how to set up IP address using the ARP packets.

3.10.7. Multiple Connection

The screenshot shows the ezConfig v4.0a (01/Aug./2005) window. The 'LOCAL' tab is active. In the 'Options' section at the bottom, the 'Multi Conn.' checkbox is checked and highlighted with a red box. Other options include DHCP, PPPoE, ezCFG, WLAN CFG, Power Down, Remote Search, WLAN Start Option, ARP, Telnet, EAPoL, and Secure. The 'ezTCP Mode' is set to T2S(0). The 'Serial Type' is RS-232. The 'WLAN Mode' is AD-HOC(0). The 'Search List' contains two entries: 00:30:f9:00:00:04 and 00:30:f9:02:60:aa. The 'Local IP Address' is 10.1.0.1, 'Subnet Mask' is 255.0.0.0, 'Gateway IP Address' is 0.0.0.0, 'Permitted IP address' is 0.0.0.0, and 'Reserved' is empty. The 'ezTCP Mode' is T2S(0), 'Local Port' is 50000, 'Timeout' is 0, 'Conn. Byte' is 1, 'Peer Port' is 0, and 'Password' is empty. The 'Serial Type' is RS-232, 'Baudrate' is 115200, 'Parity' is NONE, 'Data Bits' is 8, 'Stop Bit' is 1 bit, and 'Flow Control' is RTS/CTS. The 'WLAN Mode' is AD-HOC(0), 'Target SSID' is empty, 'Ad-hoc Master SSID' is empty, 'Channel' is 0, 'WEP' is No WEP(0), and 'WEP Key' is empty.

[Fig 3.10.7.1. Multiple Connection]

- When Multiple Connection option is selected multiple clients can connect to ezTCP.
- This option can be used when ezTCP communication mode is set to T2S (TCP server).
- This option is currently supported by EZL-200F and EZL-300S models only.

3.10.8. Telnet

The screenshot shows the ezConfig v4.0a (01/Aug./2005) window. The 'LOCAL' tab is active. In the 'Options' section at the bottom, the 'Telnet' checkbox is checked and highlighted with a red box. Other options include DHCP, PPPoE, ezCFG, WLAN CFG, Power Down, Remote Search, WLAN Start Option, ARP, Multi Conn., EAPoL, and Secure. The 'ezTCP Mode' is set to T2S(0). The 'Serial Type' is RS-232. The 'WLAN Mode' is AD-HOC(0). The 'Search List' contains two entries: 00:30:f9:00:00:04 and 00:30:f9:02:60:aa. The 'Local IP Address' is 10.1.0.1, 'Subnet Mask' is 255.0.0.0, 'Gateway IP Address' is 0.0.0.0, 'Permitted IP address' is 0.0.0.0, and 'Reserved' is empty. The 'ezTCP Mode' is T2S(0), 'Local Port' is 50000, 'Timeout' is 0, 'Conn. Byte' is 1, 'Peer Port' is 0, and 'Password' is empty. The 'Serial Type' is RS-232, 'Baudrate' is 115200, 'Parity' is NONE, 'Data Bits' is 8, 'Stop Bit' is 1 bit, and 'Flow Control' is RTS/CTS. The 'WLAN Mode' is AD-HOC(0), 'Target SSID' is empty, 'Ad-hoc Master SSID' is empty, 'Channel' is 0, 'WEP' is No WEP(0), and 'WEP Key' is empty.

[Fig. 3.10.8.1. Telnet]

- When Telnet option is selected, ezTCP equipment can be managed through ezTCP network console connection.
- This option is currently supported by EZL-200A, EZL-200F, EZL-300W, and EZL-300S models only.

3.10.9. EAPoL (Extensible Authentication Protocol over LAN)

- This option is currently supported by EZL-300W model only.
- You cannot set this option using ezConfig; use ezSerialConfig instead. EZL-300W supports EAP-MD5 protocol.

3.10.10. Security

The screenshot shows the ezConfig v4.0a (01/Aug./2005) window. The 'LOCAL' tab is selected. The 'Options' section at the bottom contains several checkboxes: DHCP, PPPoE, ezCFG, WLAN CFG, Power Down, Remote Search, WLAN Start Option, ARP (checked), Multi Conn., Telnet (checked), EAPoL, and Secure (highlighted with a red box). The 'ezTCP Mode' is set to T2S(0). The 'Serial Type' is RS-232. The 'WLAN Mode' is AD-HOC(0). The 'WEP' section shows 'No WEP(0)' selected.

[3.10.10.1. Security]

- When Security option is selected and ezTCP communication mode is set to T2S (TCP server) or COD (TCP client), SSL (Secure Server Layer) communication is available.
- This option is supported by EZL-200F, EZL-300S models only.
- You cannot set this option using ezConfig; refer to specific product manual on how to set up secure communication.

3.10.11. Remote Search

ezConfig v4.0a (01/Aug./2005)

LOCAL REMOTE

MAC Address: 00 30 f9 01 00 a2

Read

Search List:

- 00:30:f9:00:00:04
- 00:30:f9:01:00:a2
- 00:30:f9:04:04:cb

Local IP Address: 10 . 1 . 0 . 1

Subnet Mask: 255 . 0 . 0 . 0

Gateway IP Address: 0 . 0 . 0 . 0

Permitted IP address: 0 . 0 . 0 . 0

Reserved:

ezTCP Mode: T2S(0)

Local Port: 1470

Timeout: 0

Conn. Byte: 0

Peer Port: 0

Password: ■■■■

Serial Type: RS-232

Baudrate: 19200

Parity: NONE

Data Bits: 8

Stop Bit: 1 bit

Flow Control: NONE

WLAN Mode: AD-HOC(0)

Target SSID:

Ad-hoc Master SSID:

Channel: 0

WEP: No WEP(0)

WEP Key:

Options:

- ☐ DHCP
- ☐ PPPoE
- ☒ ezCFG
- ☐ WLAN CFG
- ☐ Power Down
- ☒ Remote Search
- ☒ ARP
- ☐ Multi Conn.
- ☐ Telnet
- ☐ EAPoL
- ☐ Secure

WLAN Start Option:

Comment:

Search ezTCP Write PPPoE ID Change PWD Status Exit

[Fig. 3.10.11.1. Remote Search]

- When Remote Search option is selected, ezTCP can be managed using the [2.2. Unicasting] method.
- Refer to section 2.2. Unicasting for which products support Remote Search function.

3.10.12. WLAN Start Option

ezConfig v4.0a (01/Aug./2005)

LOCAL REMOTE

MAC Address: 00 30 f9 04 04 cb

Read

Search List:

- 00:30:f9:00:00:04
- 00:30:f9:01:00:a2
- 00:30:f9:04:04:cb

Local IP Address: 10 . 1 . 0 . 1

Subnet Mask: 255 . 0 . 0 . 0

Gateway IP Address: 0 . 0 . 0 . 0

Peer IP Address: 0 . 0 . 0 . 0

Reserved:

ezTCP Mode: T2S(0)

Local Port: 1470

Timeout: 0

Conn. Byte: 1

Peer Port: 1470

Password:

Serial Type: RS-232

Baudrate: 19200

Parity: NONE

Data Bits: 8

Stop Bit: 1 bit

Flow Control: NONE

WLAN Mode: Infrastructure(1)

Target SSID:

Ad-hoc Master SSID:

Channel: 0

WEP: No WEP(0)

WEP Key:

Options:

- ☐ DHCP
- ☐ PPPoE
- ☒ ezCFG
- ☒ WLAN CFG
- ☐ Power Down
- ☐ Remote Search
- ☒ ARP
- ☐ Multi Conn.
- ☐ Telnet
- ☐ EAPoL
- ☐ Secure


WLAN Start Option:

Comment:

Search ezTCP Write PPPoE ID Change PWD Status Exit


[Fig. 3.10.12.1. WLAN start option]

- To enable this option you must select [3.10.4. WLAN CFG].
- This function helps start wireless LAN using the ezConfig in case of booting problems. When this function is enabled, ezTCP tries to connect to the designated network during the specified time period.
- Click the [WLAN Start Option] button to display the window shown below.

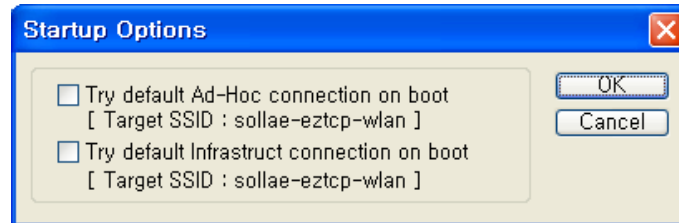

- If you save configuration data to ezTCP when this option is enabled, ezTCP tries to connect to the wireless LAN during booting as an Access Point or Ad-Hoc master that contains SSID and called [sollae-eztcp-지무].
- If [sollae-eztcp-지무] wireless LAN connection fails, wireless LAN connection is tried again using SSID supplied as a Target SSID value.

3.10.13. Comment

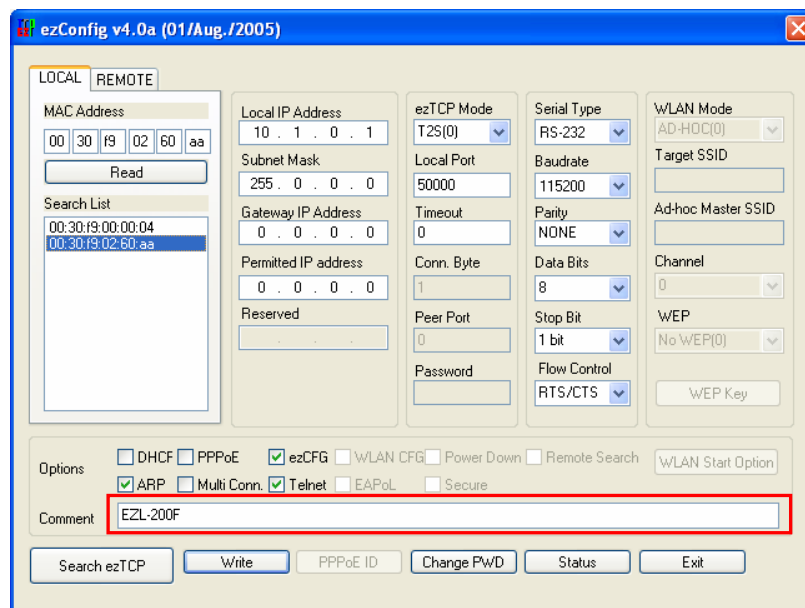

[Fig. 3.10.13.1. Comment]

- When multiple ezTCP devices are managed, comments help you distinguish ezTCP equipment.
- The Comment field is available for all products supporting this function.
- Maximum comment length can be 32 bytes.

- This option is currently supported by EZL-50L, EZL-200L, EZL-200F, EZL-300S, and EZL-300L models only.
- The firmware version 1.3i or higher will support the EZL-80/80c/90/ 300W Lite models.